

MR311 Range Cooker

Manual for Installation, Use and Maintenance



Important

This appliance must only be used for the purpose for which it is intended, i.e. domestic cooking. Any other use could be dangerous and may lead to premature failure of the appliance.

The CDA Group Ltd cannot be held responsible for injuries or losses caused by incorrect use or installation of this product. Please note that CDA reserve the right to invalidate the guarantee supplied with this product following incorrect installation or misuse of the appliance.

This appliance is not designed to be used by people (including children) with reduced physical, sensorial or mental capacity, or who lack experience or knowledge about it, unless they have had supervision or instructions on how to use the appliance by someone who is responsible for their safety.

Under no circumstances should any external covers be removed for servicing or maintenance except by suitably qualified personnel.

Appliance information:

Please enter the details on the appliance rating plate below for reference, to assist CDA Customer Care in the event of a fault with your appliance and to register your appliance for guarantee purposes.

Appliance Model	
-----------------	--

Serial Number	
---------------	--


CE Declarations of Conformity:

This oven has been designed, constructed and marketed in compliance with safety requirements of EEC Directive 2006/95/EEC (Low voltage) and requirements of EMC Directive 2004/108/EEC.

This appliance has been manufactured to the strictest standards and complies with all applicable legislation, including Electrical safety (LVD) and Electromagnetic interference compatibility (EMC). Parts intended to come into contact with food conform to EEC/89/109.4

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin. 

User information:

Read the instructions carefully before using the cooker.

Keep the instructions in a safe place for future reference.

Follow the instructions for first use (page 4).

Always use oven gloves when removing shelves and trays from the cooker.

Always grill with the door closed.

Do not grill food containing fat without using the grill pan grid.

Do not use the grill pan for roasting.

Do not place cooking utensils or plates directly on the oven base.

Do not cover the grill pan grid or the oven walls with aluminium foil.

Do not attempt to repair the internal workings of your oven.

Cookers become hot during and immediately after use. Do not touch the pan stands, burners, hob spill tray or oven internal parts until the appliance has been allowed to cool.

After use, ensure that all the control knobs are switched off.

Keep children away from the cooker when in use and immediately after use.

Ensure that the appliance is correctly adjusted for the type of gas available before installation.

The use of a gas appliance produces heat and humidity in the room in which it is installed. Ensure that the room is well ventilated, either by the use of natural ventilation outlets (e.g. windows) or a ducted extractor.

This cooker has been designed for use only as a cooking appliance. Any other use (e.g. heating rooms) should be considered incorrect and therefore dangerous.

This cooker must not be installed in a bed-sit room of less than 20m³.

These instructions are valid only for the intended countries of destination, the symbols of which appear on the cover, the packaging and on the appliance. Use outside of these countries may or may not be possible. You should consult the manufacturer for appropriate advice.

Do not spray aerosols in the vicinity of this appliance when in use.

Do not store or use flammable substances in the vicinity of this appliance when in use.

When correctly installed, your product meets all safety requirements laid down for this type of product.


However, special care should be taken around the rear or the underneath of the appliance as these areas are not designed or intended to be touched and may contain sharp or rough edges that could cause injury

Before first use

- Before using the oven for the first time we recommend that you clean the oven with soapy water, rinse carefully, dry thoroughly and then heat on the oven function at maximum temperature for one hour. A slightly unpleasant smell may be produced, caused by grease remaining on the oven elements from the production process.

Please note:

- This oven has been fitted with a cooling fan to achieve maximum efficiency and to maintain low surface temperatures. The cooling fan will switch on automatically when the oven reaches a preset temperature and switch off automatically when the oven has cooled sufficiently, even after the oven is switched off.
- The oven is equipped with a safety thermostat which will switch off the oven to prevent overheating. Overheating can be caused by incorrect use of the oven or defective components. If the oven switches off due to overheating, wait for the oven to cool down before using it again. If the error continues, contact CDA Customer Care.

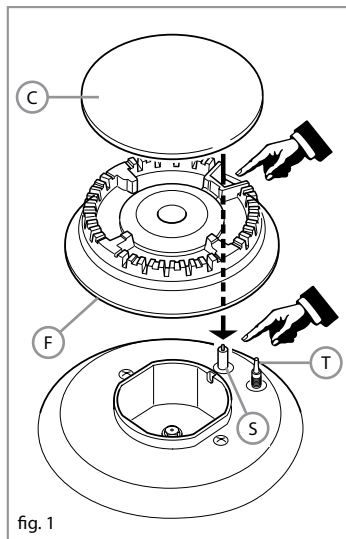


Before using the hob

- Before lighting the hob burners, check that the flame-spreaders (F) are in position with their respective burner caps (C), ensuring that the holes in the flame-spreaders are aligned with the ignition electrodes (S) and thermocouples (T) as shown in fig. 1.
- Once the contents come to the boil, turn down the flame far enough to prevent the liquid from boiling over. To prevent burns or damage to the hob during cooking, all pans or griddle plates must be placed inside the perimeter of the hob.
- Place the pan on the pan supports with the handles facing away from the edge of the work top. This will reduce the risk of the pan being knocked or pulled over.

Deep Fat Frying

- Only fill the pan one third full of oil.
- Do not put a lid on the pan and never leave the pan unattended.
- In the event of a fire, do not move the pan and turn off all control knobs.
- Then put a damp cloth over the pan, or a correctly fitting lid to smother the flames.
- Do not put water on the fire.
- Leave the pan to cool for at least 30 minutes before attempting to move it.

Using your hob

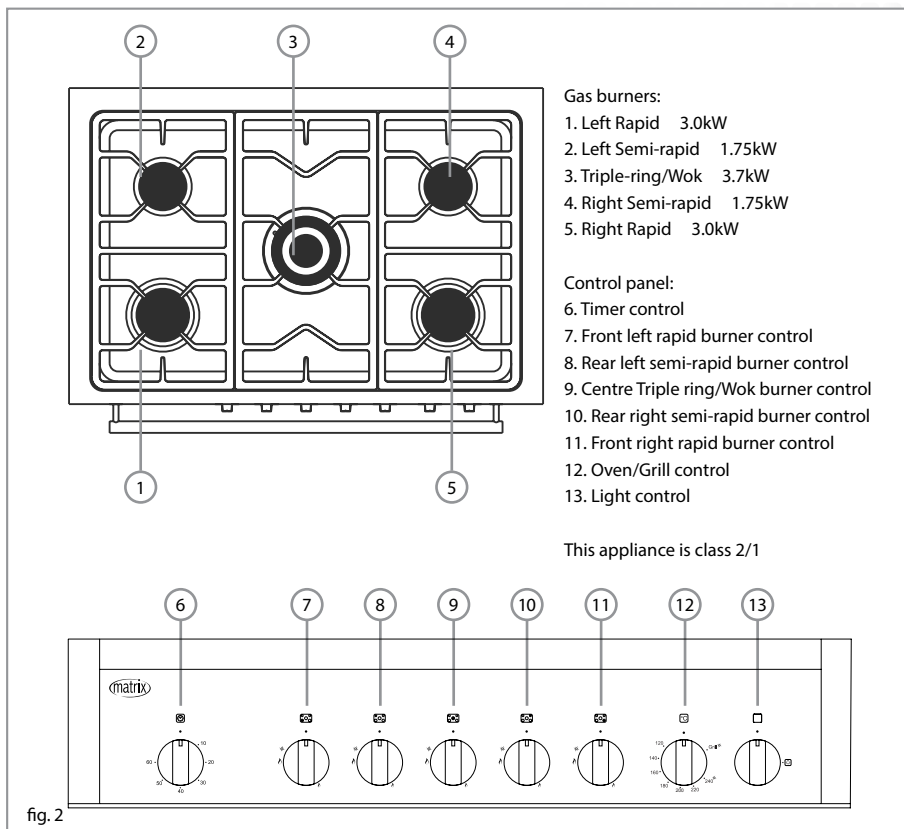

Gas burners:

Gas flow to the burners is controlled by the control knobs (7 - 11 on the diagram above). There are 3 positions shown on the control panel. Turning the control knob to the positions shown below achieves the following:

● Closed (OFF position)



Maximum position: Provides fast boiling function



Minimum position: Provides simmer function

The hob can be set to the desired position by turning the control knob through the adjustment range in an anti-clockwise direction.

Igniting the Burners

The hob is fitted with a flame failure device. Flame failure devices operate by shutting off the supply of gas to the burner in the event that the flame is extinguished accidentally.

To ignite the burners, follow these instructions:

1. Lightly press the control knob down and turn the knob anticlockwise to the maximum position. Firmly press and hold down the control knob to begin the ignition process (a clicking sound will be heard). Hold down the control knob for a few seconds after ignition to allow the safety device to detect that the burner is lit.
2. Once the burner is lit, adjust the burner power to the required position.

Please note:

- The ignition device should not be operated for more than 15 seconds.
- If a burner does not ignite, or turns off accidentally, turn the control knob to the 'off' position, and wait for one minute before attempting to reignite the burner.
- If the burner does not ignite, repeat the ignition process with the burner at the minimum position.

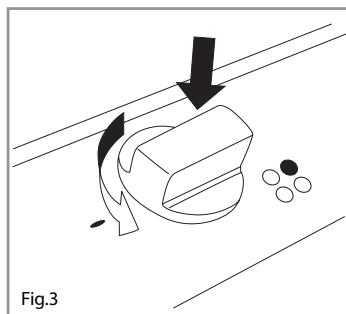


Fig.3

Efficient use of your Hob

The hob is equipped with burners of different sizes, designed to accommodate most shapes and sizes of pan. For best results, only use pans with flat bottoms and choose an appropriate burner depending on the size of the pan. The most efficient use of the hob is shown below, where the pan and burner are correctly chosen.

Ensure that the pans do not overlap the edge of the pan stand, or cover the control panel. Position the pan centrally above the burner.

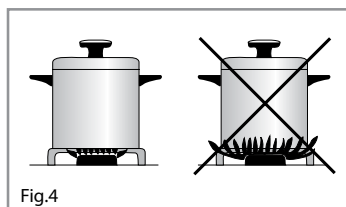


Fig.4

The table below shows the sizes of pan that should be used with each burner:

Burner Size	Minimum Pan Diameter (cm)	Maximum Pan Diameter (cm)
Semi-Rapid	12	20
Rapid	20	26
Triple ring	24	28
Wok	-	36



Correct use of the Wok Pan Adaptor

The wok pan adaptor is a special stand that is designed to be fitted over the triple ring burner to give support to round bottomed woks.

When using a wok, always place the wok pan adaptor in position over the pan support on the triple ring burner as shown in Fig.5.

IMPORTANT:

- The wok pan adaptor (Fig.5) must be placed over the pan support on the triple ring burner.
- Do not use the wok pan adaptor for standard flat bottomed pans.

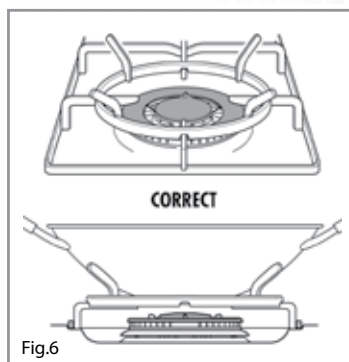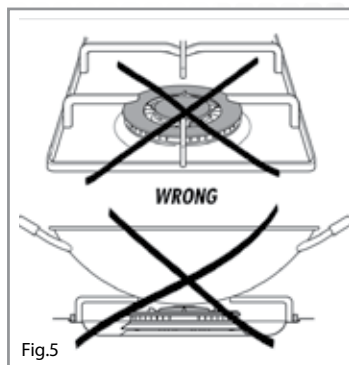

The Oven and Grill

Using the light

The cooker is equipped with a light to illuminate the oven cavity allowing easy viewing of the food as it cooks.

To switch the oven light on, turn the oven light control knob to the light position.

To switch the oven light off, turn the oven light control knob to the off position.

Using the minute minder

The cooker is equipped with a minute minder, to count down the time to a maximum of 60 minutes.

To set the minute minder, turn the minute minder control knob fully clockwise to the maximum, and then anticlockwise until the control knob indicates the required time.

At the end of the preset time, a buzzer will sound.

Please note: the minute minder will not switch off the oven, grill or burners at the end of the preset time.

Using the oven

The oven/grill control knob allows the oven temperature to be set as required.

The oven burner is fitted with a flame failure device. This will shut off the supply of gas to the burner in the event that the flame is extinguished accidentally.

To light the oven burner, follow the instructions below:

1. Open the oven door fully. The oven door must be open during the ignition process – the oven is equipped with a safety system which will prevent the oven lighting if the door is closed.
2. Push in and turn the oven control knob anticlockwise until the indicator points to the oven 240 ° position.
3. Press the knob fully in to activate the ignition. Keep the control knob pushed fully in for a maximum of 15 seconds to allow the safety device to detect that the burner is lit.
4. Close the oven door slowly.
5. Adjust the oven control knob to the required temperature position.

Please note:

If the burner does not ignite after 15 seconds, turn the oven control knob back to the off position, leave the oven door ajar and wait for at least one minute before repeating the process above.

If the burner is extinguished accidentally, turn off the control knob and wait approximately one minute before attempting to relight the burner.

You should allow the oven to preheat for 10 to 15 minutes prior to starting cooking.

Using the grill

The grill burner is fitted with a flame failure device. This will shut off the supply of gas to the burner in the event that the flame is extinguished accidentally.

To light the grill burner, follow the instructions below:

1. Open the oven door fully. The oven door must be open during the ignition process – the grill is equipped with a safety system which will prevent the grill lighting if the door is closed.
2. Push in and turn the oven control knob clockwise until the indicator points to the Grill * position.
3. Press the knob fully in to activate the ignition. Keep the control knob pushed fully in for a maximum of 15 seconds to allow the safety device to detect that the burner is lit.
4. Close the oven door slowly.

Please note:

If the burner does not ignite after 15 seconds, turn the control knob back to the off position, leave the oven door ajar and wait for at least one minute before repeating the process above.

If the burner is extinguished accidentally, turn off the control knob and wait approximately one minute before attempting to relight the burner.

You should allow the grill to preheat for 5 minutes prior to starting cooking

Do not grill for more than 30 minutes.

Please note:

Always ensure that you turn all the control knobs back to their off positions after cooking.

Care and Maintenance

Cleaning the Cooker

IMPORTANT:

Always disconnect the appliance from the power supply before undertaking any cleaning or maintenance.

You should always allow the cooker to cool fully after use before undertaking any cleaning or maintenance.

- Steam cleaners must not be used when cleaning this appliance
- Clean the cooker regularly and remove spills as soon as they occur.
- Do not allow fat or oils to build up on the hob or in the oven.
- Do not place hot enamel parts (e.g. burner caps, grill pan) in water. Leave them to cool first.
- Do not allow vinegar, coffee, milk, saltwater, lemon or tomato juice to remain in contact with enamel parts
- Do not use abrasive or corrosive cleaners (including scouring pads or Cif) as these could scratch the appliance, remove control panel markings or damage the cooker.
- Do not clean the removable parts of the cooker in a dishwasher, these must be washed by hand.

For the glass and stainless steel surfaces, you should use a nonabrasive cleaner. Any abrasive cleaner (including Cif) will scratch the surface and could erase the control panel markings. Stainless steel can be effectively cleaned by simply using a dilute solution of water and mild detergent and drying to a shine with a clean cloth.

Over time with use, the stainless steel surface may discolour; this is normal and does not constitute a fault with this appliance. Proprietary stainless steel cleaners are available.

Cleaning the Oven Interior

To clean the oven interior, suitable proprietary chemical cleaners may be used after first consulting with the manufacturer's recommendations and testing a small sample on the oven cavity.




If necessary, the oven floor can be removed for cleaning.

Do not use metal scrapers or harsh cleaners on the oven door glass. These could cause scratches, which may result in the glass shattering.

To remove the side racks, press down on the top bar of the side rack to free the rack from the top securing pin, then remove the side rack by lowering it out so that the hooks on the lower edge are freed from the oven cavity (as shown in fig. 8 and 9).

To replace the side racks, locate the lower hooks in the oven cavity, then pivot the side rack back into position, pressing the top bar down to relocate it against the securing pin.

Ensure that all parts are correctly replaced after cleaning before attempting to use the cooker, and that the rubber pads are in place on the base of the pan stands before repositioning the pan stands on the hob top. To replace the hob burner parts correctly, refer to fig. 1 on page 4.



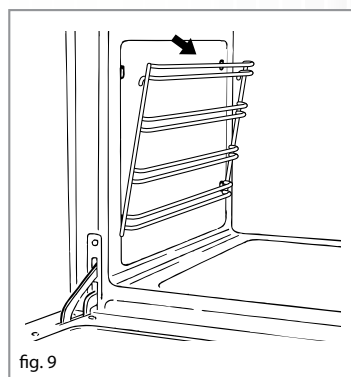
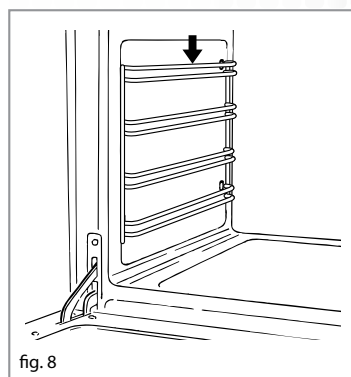
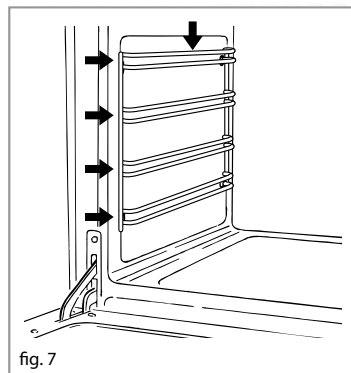


Removing the Oven Door

The oven door can easily be removed as follows:

- Open the door to the full extent (fig. 10)
- Open the lever A completely on the left and right hinge see (fig. 11)
- Hold the door as shown in fig. 14
- Gently close the door (fig. 13) until left and right hinge levers A are hooked to part B of the door (fig. 12)
- Withdraw the hinge hooks from their location following arrow C (fig. 13)
- Rest the door on a surface.

To replace the door, repeat the above steps in reverse order.

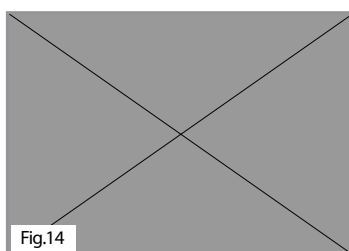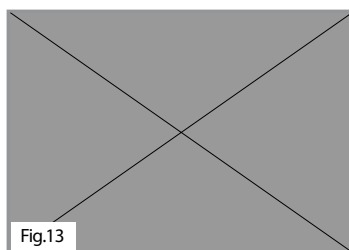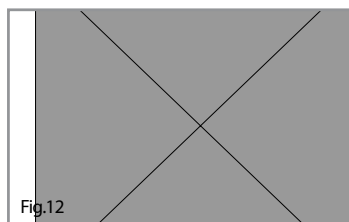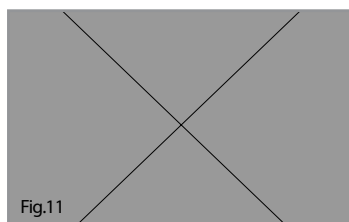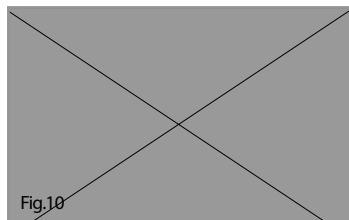

Care and Maintenance

Flexible gas pipe

Check the flexible gas pipe connecting the gas supply to the cooker regularly.

It must be always in perfect condition; in case of damage contact Customer Care for advice.

Control knobs

Should any of the control knobs become stiff, do not use force. Contact Customer Care for advice.

Changing the oven light

1. Disconnect the electrical power supply (for example, by switching off the main isolator switch).
2. Unscrew the light cover.
3. Fit a new bulb.
4. Refit the cover.

Note:

Use only bulbs designed to resist up to 300°C with the following characteristics: 230 V, type E14 and same power of the replaced bulb (check watt power as stamped on the bulb itself).

What to do if you smell gas:

1. Open doors and windows
2. Turn the gas supply off
3. Call TRANSCO on 0800 111 999

Burner size	Nominal Rating (kW)	Simmer Rating (kW)	LPG flow rates (l/h)	
			G30 (Butane)	G31 (Propane)
Semi-Rapid	1.75	0.6	127	125
Rapid	3.0	1.0	218	214
Triple ring / Wok	3.7	1.25	269	264

Total rated gas input: 17.7 kW

Mains electrical voltage: 230-240Vac, 50Hz

Total rated electrical consumption: 0.036 kW

If your cooker is not working

1. Check that the mains supply has not been switched off.
2. Check that the fuse in the spur has not blown.
3. Ensure that the burner components are not excessively soiled as this can lead to ignition problems.

Installation section

The manufacturer will not be held responsible for any damage to property or injury to persons/animals resulting from incorrect installation of this appliance.

We recommend you seek the help of another individual when installing this appliance to prevent damage or injury.

Installation requirements

This range cooker is designed to be installed flush with adjacent worktops however in situations where the hob top will be lower than the worktop then a distance of 200mm should be observed.

A distance of 500mm between the range cooker and any adjacent combustible materials (e.g. curtains) should be observed.

A distance of 200mm between the range cooker and adjacent vertical surfaces should be observed.



This appliance is class 2/1 and is suitable for installation adjacent to furniture cabinets.

If fitting a cooker hood above the range cooker:

If a cooker hood is to be installed above the range cooker, the height of the hood above the burners must be at least 700mm (750mm is recommended). If the instructions supplied with the hood dictate that the hood must be installed at a height greater than 700mm, then that height is the minimum required.

Wall furniture requirements:

The minimum height of any cabinet immediately above the hob is 900mm. The minimum height of any adjacent units (including light pelmets) is 450mm, unless they are manufactured from a material resistant to fire (steel, for example).

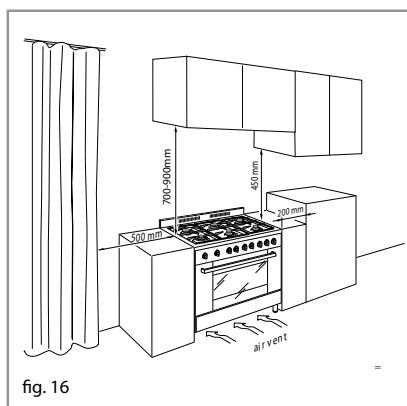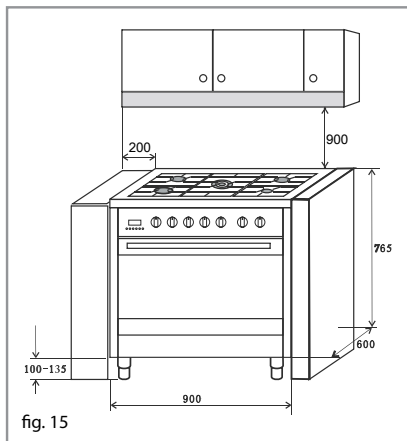

Notes:

- Do not position this appliance adjacent to a refrigeration unit. The heat generated may cause the refrigeration unit to fail.
- This appliance is designed to be installed adjacent to cabinet units capable of withstanding temperatures of 65°C or greater above ambient temperature.

Gas connection

This appliance is supplied with ½" BSP tapered male elbow connection (fig 17)

Anti-tilt bracket/chain

This appliance is supplied fitted with safety chains and wall mounted brackets to prevent it tilting forwards. These should be fitted as part of the installation.

You must ensure that the fixings are suitable for the wall type. Those included may not be suitable in all situations.

Height adjustable feet

The adjustable feet must be fitted to the base of the range cooker before use.

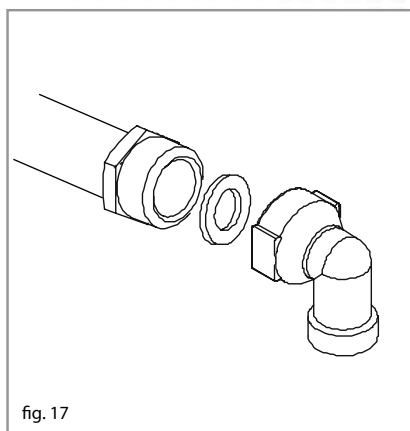


fig. 17

Rest the rear of the appliance on the packaging exposing the base to fit the feet.

Fit the four legs by screwing them hand tight into the support base. To prevent damage, lift the range cooker into position. Do not push it across the floor unnecessarily.

Installation section

THIS APPLIANCE MUST BE CONNECTED TO THE MAINS SUPPLY BY A COMPETENT PERSON, USING FIXED WIRING VIA A DOUBLE POLE SWITCHED FUSE SPUR OUTLET AND PROTECTED BY A 3A FUSE.

We recommend that the appliance is connected by a qualified electrician, who is a member of the N.I.C.E.I.C. and who will comply with the I.E.E. and local regulations.

The wires in the mains lead of this appliance are coloured in accordance with the following code:


Green & Yellow = Earth, Blue = Neutral, Brown = Live.

As the colour of the wires in the mains feed for the appliance may not correspond with the coloured markings identifying the terminals connecting to the fuse spur, proceed as follows:

1. The wire which is coloured green and yellow must be connected to the terminal marked E (Earth) or coloured Green.
2. The wire which is coloured blue must be connected to the terminal marked N (Neutral), or coloured Black.
3. The wire which is coloured brown must be connected to the terminal marked L (Live), or coloured Red.

Note: Use a 3 AMP Fuse

Assembly and electrical connection should be carried out by specialised personnel. When installing this product we recommend you seek the help of another individual.

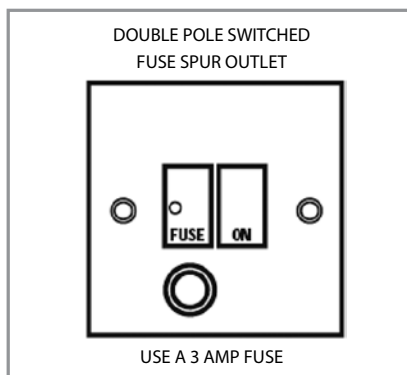

Gas Supply Requirements

IMPORTANT: THIS APPLIANCE SHOULD BE FITTED BY A GAS SAFE REGISTERED FITTER OR OTHER SUITABLY QUALIFIED PERSON.

- This installation must comply with the Gas Safety (installation and use) Regulations 1984.
- This appliance is category II2H3+ and is designed for use in the UK and Ireland. The installation must comply with the Gas Safety (installation and use) Regulations 1984.
- The CDA Group Ltd is not legally able to provide any assistance in the installation of gas appliances except to Gas Safe registered installers. Any Gas Safe registered fitter requiring help must provide their name, address and registration number. Information supplied will be validated before help is provided.
- This appliance is suitable for conversion to Liquid Petroleum Gas (G30 Butane at a pressure of 28-30mbar or G31 Propane at a pressure of 37mbar). A kit is provided. Do not attempt to fit the conversion kit yourself.
- This appliance is adjusted for natural gas (G20) at 20mbar only.
- In the event that this appliance is not installed in accordance with the above requirements, the appliance may be disconnected from the mains gas supply until any faults are rectified; this is a legal requirement.
- This appliance must not be connected to a combustion gas recovery scavenging system.
- The connection to the gas supply must comply with all current regulations in force.
- We are not legally able to offer advice on the installation of gas appliances to non Gas Safe registered personnel.
- An isolation tap should be provided which must be accessible after installation.

Ventilation

All rooms require a window or equivalent (e.g. a door) which can be opened. Some rooms require a permanent vent in addition to a window (see below).

This unit must not be used in a room which is less than 5m³. The following table details the requirements based on the kitchen volume (L x W x H) in m³.

The above requirements also allow use of a gas oven and grill but if there are any other fuel burning appliances in the same room, consult the relevant British Standard (BS5440-2:2000) or appropriate Gas Safe document.

Flexible gas hoses complying with BS669-1 may be used in situations where the ambient temperature of the hose will not exceed 70C.

Please note that gas hoses designed for natural gas use only must not be used for supplying LPG.

LPG hoses can be identified by either a red band or stripe on the outer coating of the hose. The hose should be positioned in accordance with current gas regulations.

Room Volume (m ³)	Air Vent Req (cm ³)
Less than 5	100
5 to 10	50
10 or more	No permanent vent if a door or window opens to the outside

Natural Gas to LPG conversion

This appliance can be converted from natural gas to propane operation at a nominal inlet pressure of 37mbar, or butane operation at a nominal inlet pressure of 28/30mbar. This conversion must only be carried out by a competent person (i.e. a Gas Safe registered fitter)

Instructions to fit replacement hob injectors:

1. Disconnect the appliance from the gas and electrical supplies.
2. Remove burner components and pan supports.
3. Remove the injectors with a 7mm socket spanner and replace with the corresponding injectors as shown in the table below.
4. Refit the burner components and pan supports.
5. Regulate the burner minimum flow rates (see page 20).

Instructions to fit replacement oven injectors:

1. Disconnect the appliance from the gas and electrical supplies.
2. Remove the accessories and the oven floor from the oven.
3. Remove two securing screws at the left hand side of the burner, marked A (as shown in fig. 19) and move the burner to the right to allow access to the injector.
4. Remove the injector using a 7mm socket spanner and replace with the corresponding injector as shown in the table below.
5. Move the burner back into position and refit the securing screws A.
6. Set the burner primary air rates (see page 20).
7. Refit the oven floor and accessories.
8. Regulate the oven burner reduced flow rate (see page 20).

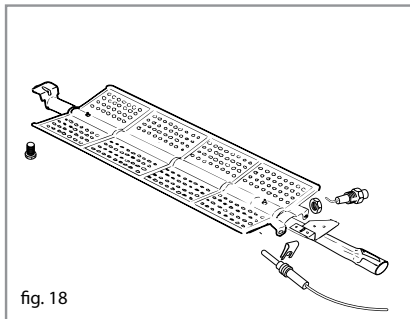


fig. 18

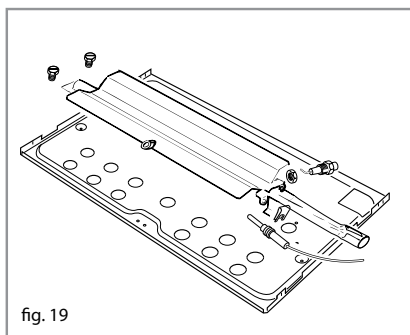


fig. 19

Instructions to fit replacement grill injectors:

1. Disconnect the appliance from the gas and electrical supplies.
2. Remove the accessories from the oven.
3. Remove the securing screw at the left hand side of the burner, as shown in fig.18
4. Remove the injector using a 7mm socket spanner and replace with the corresponding injector as shown in the table below.
5. Move the burner back into position and refit the securing screws A.
6. Set the burner primary air rates (see page 20).
7. Refit the accessories.

When converting from Natural Gas to LPG, it is important that the LPG identity sticker is placed on or adjacent to the rating plate on the appliance.

Burner	LPG Injector	Natural Gas Injector
Semi-Rapid	65	97
Rapid	85	118
Wok	95	140
Grill	82	122
Oven	105	140

Setting up the Range Cooker for Use

Primary air adjustment for the oven and grill burners

Loosen the adjustment screw A of the air regulation sleeve.

Turn the adjustment sleeve to the position that corresponds to the type of gas to be used according to the table below.

Gas Type	Dimension "X"
NG	6mm opening
LPG	Fully open

Tighten the adjustment screw.

When the operation is completed, reassemble the burner and check the burner is functioning correctly.

Regulation of the hob burner minimum flow rates

1. Natural gas

Light the burner and turn it to the minimum position. Remove the gas control knob and turn the adjustment screw at the side of the valve shaft until the required minimum flame is achieved.

2. LPG

Remove the gas control knob and turn the adjustment screw at the side of the valve shaft fully clockwise.

Once the above is complete, refit the knob and verify that the burner flame is stable (the flame must not extinguish when turning the control knob rapidly between maximum and minimum position). Leave the control knob at the minimum position for one minute to check the flame failure device function. The flame should not extinguish. Repeat this process for all hob burner controls.

Regulation of the oven burner reduced flow rate

Light the burner and allow the oven to heat up to maximum temperature. Remove the oven burner control knob and turn the adjustment screw until the required minimum flame is achieved, normally 3-4mm flame height. Refit the knob and verify that the burner flame is stable (the flame must not extinguish when turning the control knob rapidly between maximum and minimum position).

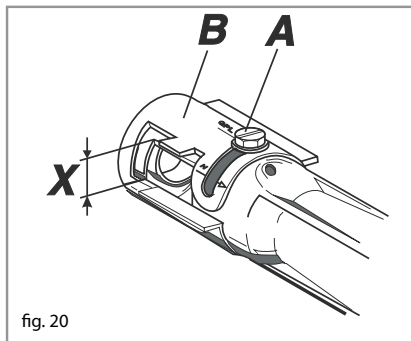


fig. 20

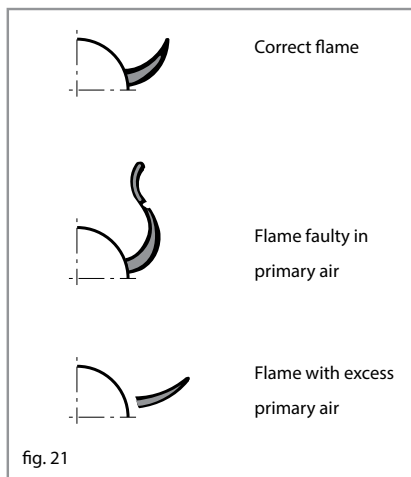


fig. 21

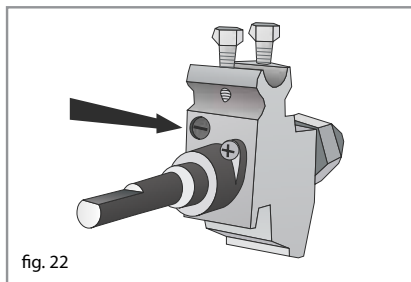



fig. 22

IMPORTANT

Failure to set the reduced rate of the oven burner correctly may result in performance problems and prevent the oven from functioning at low temperatures.

Final installation checks

1. Check that all connections are gas tight using appropriate methods and that the flexible gas hose is positioned correctly, hanging freely, is not kinked or trapped and is not in contact with any sharp edges including unfinished cabinet materials.
2. Check that the supply pressure is correct for the type of gas being used (Natural Gas 20mbar, Butane 28-30mbar, Propane 37mbar).
3. Check the correct functioning of all burners at nominal and reduced rates.

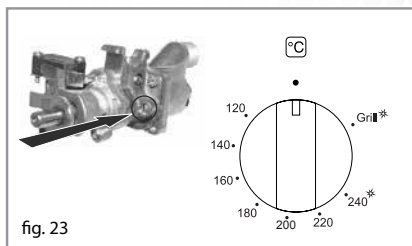

E & O E. All instructions, dimensions and illustrations are provided for guidance only. CDA reserve the right to change specifications without prior notice.



Serviced by



To contact our Customer Care Department, or for Service,
please contact us on the details below.